

Why can the Poolrunner Battery Basic no longer be switched on?

Sevda - 2024-01-26 - Comments (0) - 061205 Battery Basic

If the appliance cannot be switched on, this may be due to the following causes:

- Please check that the vacuum cleaner's battery is fully charged.
- Make sure that the ON/OFF switch has not been pressed outside the water.

If the above steps do not lead to the desired result, there may also be a defect in the motor unit or the charger.

Click here for the required spare part:

<https://www.steinbach-group.com/de/061285-motoreinheit-fuer-061205-73123de/>

A detailed description of how to replace the motor unit can be found in the appendix.

A tutorial for replacing the motor unit can be found at the following link:

<https://youtu.be/JVnriQOYjbE>

Označení
Akku leer
einschalten funktioniert nicht
Gerät piepst
Ladegerät
lässt sich nicht mehr einschalten
Motoreinheit
piepsen
piepst
reagiert nicht
schaltet sich nicht ein

Přílohy

- [Informationsblatt-Battery-Basic-Motoreinheit-tauschen.pdf \(418.07 KB\)](#)

Comments (0)
